

## **Operation Manual**


## **Components Layout**

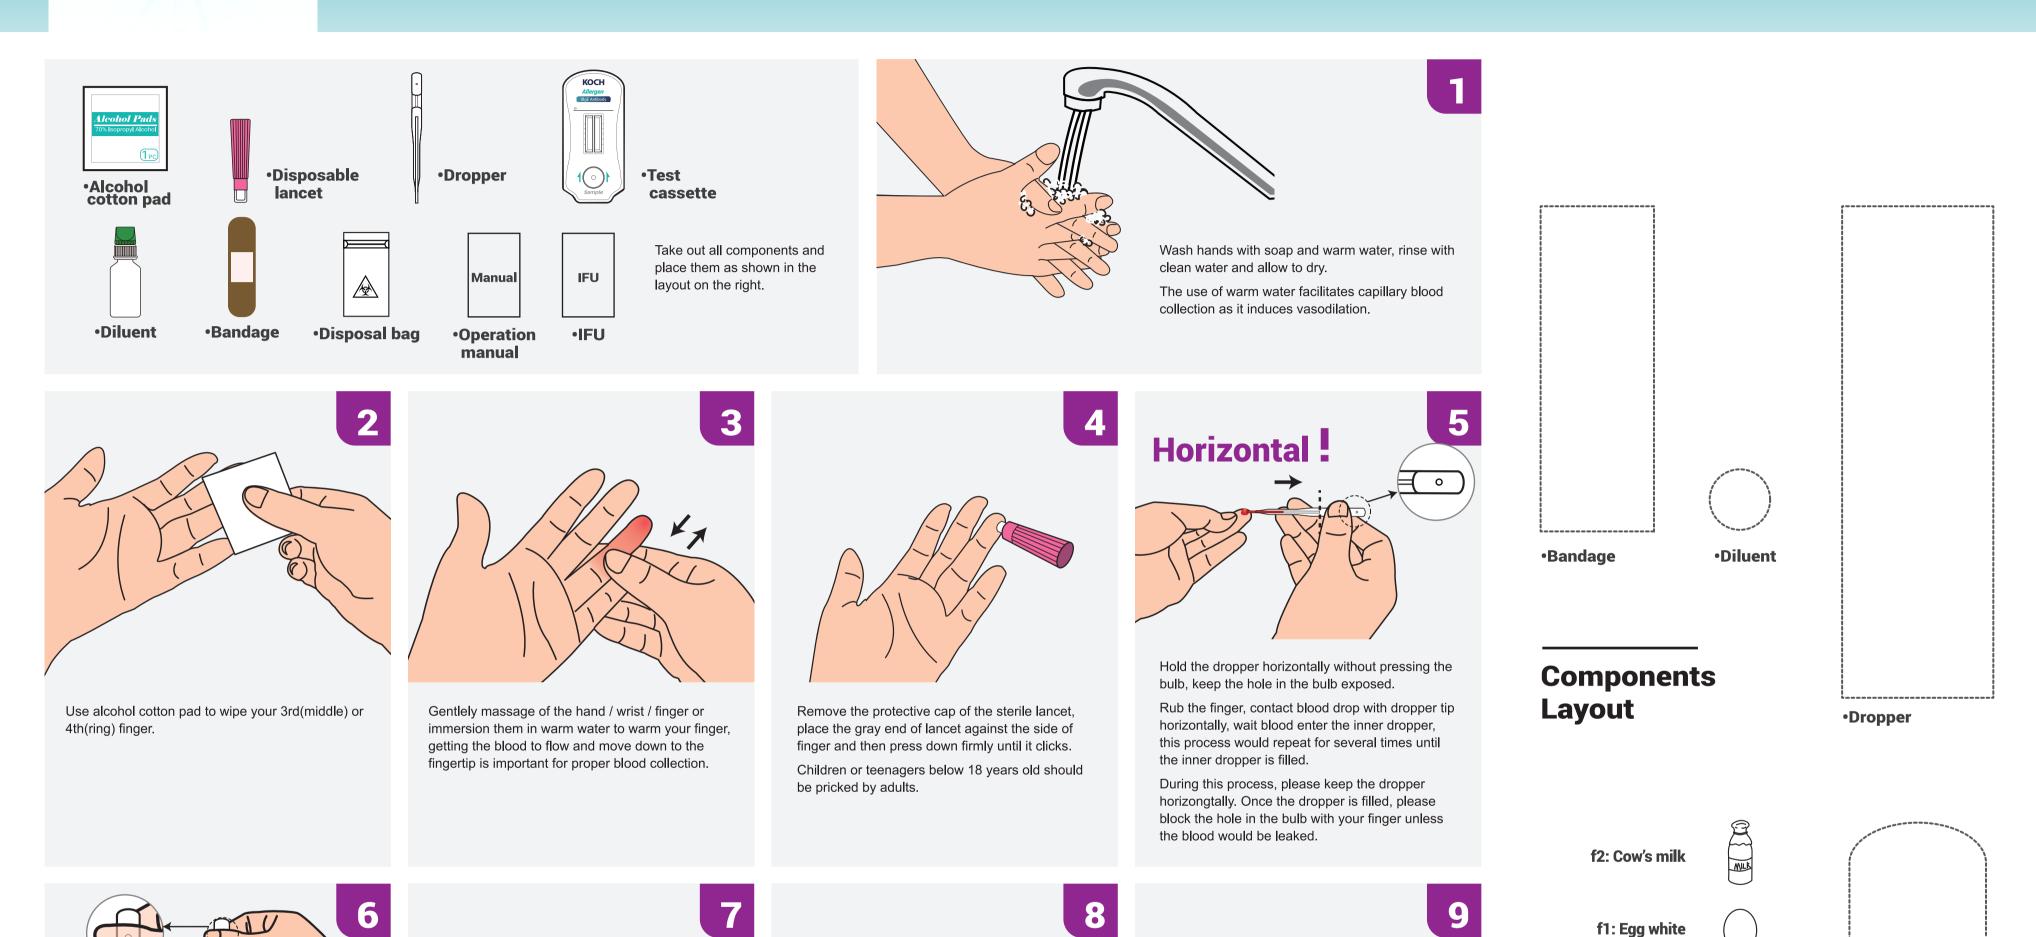

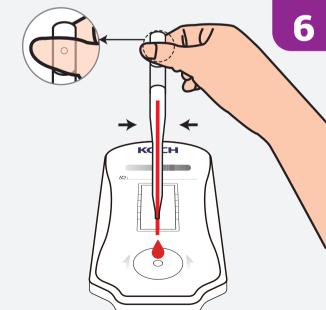


Once the dropper is filled, please block the hole in the bulb with your fingers unless the blood would be leaked, then squeeze the blood collected into the sample hole on the cassette within 30 seconds.

During this process, please keep the hole in the bulb blocked.

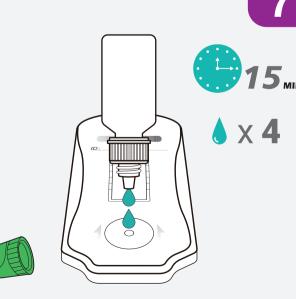


Unscrew the green cap and squeeze 4 drops of buffer into the sample hole.

Wait 15min and read results.

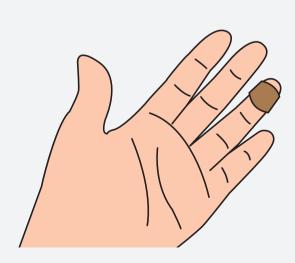

Apply a bandage on the wound after blood collection.

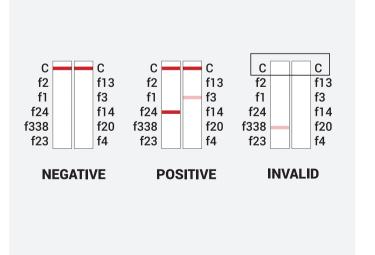

Read the results referring to the section for result interpretation in IFU.

